CODE CHANGE INSTRUCTIONS CLITTLES DIGITAL CAM LOCK RESETTING INSTRUCTIONS

- 1. Please read all instruction thoroughly before resetting combination.
- 2. Your 3 dial cam lock is factory set at 0-0-0
- **3.** Push the reset pin which is located on the right hand side of the cam lock by using a sharp pen to push in and hold until complete step 4.
- 4. Select new desired combination on the dials.
- **5.** Please write down the new combination for future reference.