

TOYOTA COROLLA, PRADO, HILUX & LANDCRUISER REMOTE PROGRAMMING

NB: If there are no existing working remotes to disarm the vehicle as stated in Step 2, remove the NEGATIVE terminal on the car battery for 30 seconds and then place it back on. Immediately begin Step 3.

1. Ensure driver's door is open
 2. Lock & unlock system with old remote.
- You have 10 seconds to begin step 3.

Corolla & Prado:

3. Insert key in the ignition. Turn from 'Off' to 'On' 26 times within 12 seconds leaving key in the 'Off' position after the 20th turn. **(If programming is unsuccessful try turning the key 26 times)**

Hilux & Landcruiser

3. Insert key in the ignition. Turn from 'Accessories' to 'On' 26 times within 12 seconds leaving key in the 'Accessories' position after the 20th turn. **(If programming is unsuccessful try turning the key 26 times)**

If successful - The indicators will flash 20 times - you are now in programming mode.

Important: Do not press any remotes until hazard lights stop flashing. Once in programming mode, you must program in at least one remote control.

4. Press any button on old remote, now press any button on new remote (Hazard lights shall flash once, upon successful programming of each remote).
5. Turn key from 'On' to 'Off' twice and exit vehicle.

NB: Some 100 Series Landcruisers require you to turn the key from 'Off' to 'On' in step 3 instead.

Toyota Corolla, Prado,
Landcruiser and Hilux

RCT14
304mhz



Toyota Corolla, Prado,
Landcruiser and Hilux

RCT13
310mhz



TOYOTA CAMRY, AVALON & CONQUEST 1997 - 2006 REMOTE PROGRAMMING

Battery non replaceable

1. Make sure your headlights are turned off.
2. Leave the driver's door open and insert the key into the ignition.
3. Turn the key from 'Accessories' to the 'On' position 3 times within 3 seconds leaving the key in the 'On' position on the 3rd time. Once in programming mode, a red LED will illuminate, or in newer models 'PR' will be displayed on the LCD screen.
4. Press the button on the new remote. The hazard lights will flash.
5. Repeat step 4 for additional and previous remotes.
6. Now remove key and exit car
(please note all other remotes will now be deleted)

NB: If car goes into programming mode, but will only accept one remote:

Replace step 4 & 5 with the following.

Press button, on all (old and new) remotes to be programmed to the vehicle, all at the same time. This may require a second person to help. Any remotes that have not been re-learnt at this time have now been forgotten.

'40 Series'
Years: 2000 to 2006

RCG08
303mhz



Toyota Camry '30 Series'
Years: 1997 to 2000

RMT08
303mhz

Nissan branded remote is
compatible with Toyota Camry models.



Important note: This remote is not
compatible with any remote that has metal
edges

TOYOTA CAMRY, CONQUEST & AVALON 1994 - 1997 REMOTE PROGRAMMING

Battery non replaceable

NOTE: You must have an existing working remote

1. Open the passenger side door and glove box.
2. On the right hand inside area of the glove box you will find a spot to insert a working remote; as you do this the red security light on dash will light up.
3. Remove the old remote and insert the new remote within 5 seconds.
4. For additional remote setup please repeat steps 2 & 3.

Toyota Camry/Conquest
'20 Series'
Years: 1995 - 1997

RMT07
304mhz



Toyota Camry/Conquest
'10 Series'
Years: 1994-1995

RMT06
315mhz

