

# TOYOTA COROLLA, PRADO, HILUX & LANDCRUISER REMOTE PROGRAMMING

NB: If there are no existing working remotes to disarm the vehicle as stated in Step 2, remove the NEGATIVE terminal on the car battery for 30 seconds and then place it back on. Immediately begin Step 3.

1. Ensure driver's door is open
2. Lock & unlock system with old remote. You have 10 seconds to begin step 3.

## Corolla & Prado:

3. Insert key in the ignition. Turn from 'Off' to 'On' 26 times within 12 seconds leaving key in the 'Off' position after the 20th turn. (If programming is unsuccessful try turning the key 26 times)


## Hilux & Landcruiser

3. Insert key in the ignition. Turn from 'Accessories' to 'On' 26 times within 12 seconds leaving key in the 'Accessories' position after the 20th turn. (If programming is unsuccessful try turning the key 26 times)

If successful - The indicators will flash 20 times - you are now in programming mode.  
Important: Do not press any remotes until hazard lights stop flashing. Once in programming mode, you must program in at least one remote control.  
4. Press any button on old remote, now press any button on new remote (Hazard lights shall flash once, upon successful programming of each remote).  
5. Turn key from 'On' to 'Off' twice and exit vehicle.

NB: Some 100 Series Landcruisers require you to turn the key from 'Off' to 'On' in step 3 instead.

Toyota Corolla, Prado,  
Landcruiser and Hilux  
RCT14  
304mhz

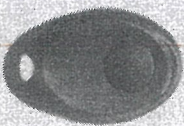

Toyota Corolla, Prado,  
Landcruiser and Hilux  
RCT13  
310mhz

