## Remsafe Metrolite World's first retractable cable lock



- ✓ Suitable for all window types and materials
- ✓ Complies with safety requirements under the Strata Schemes Management Act 2015 (NSW)
- ✓ Child resistant release mechanism allows the window to be opened to its full extent if required

To ensure proper installation of the Remsafe Metrolite, each installation site must be surveyed to determine the appropriate screw types and condition of each window frame. The Remsafe Metrolite must not be fitted to decayed or corroded materials or to structures that have in any way deteriorated and/or are in a poor condition.

### The Remsafe Metrolite is supplied with:

4 x timber gauge screws (for timber window frames only) 4 x metal gauge screws (for metal window frames only)

#### Installation:

- 1. Place the locking body either vertically or horizontally on the fixed window frame and mark the screw holes.
- 2. Drill 2 mm pilot holes, then secure the lock body to the fixed frame using either the timber screws or metal screws depending on window type.
- 3. Use a tape measure to measure a maximum opening distance of 10 cm (4 inches) from the fixed frame to the open window frame. **The opening distance must not exceed** 10 cm (4 inches) **at any point.**
- 4. Extend the locking pin from the cable body. Insert the locking pin into the receptor in the locking body until it clicks into place.
- 5. To determine the fixing position of the cable body on the moving window frame, hold the window open to 10 cm (4 inches). With the locking pin secured in the locking body, hold the cable body on the open window frame in the fully extended position to ensure the opening distance does not exceed 10 cm (4 inches). Mark the fixing holes in this position.
- 6. Drill 2 mm pilot holes, then secure the cable body to the opening frame using either the timber screws or metal screws depending on window type.
- 7. Engage the locking pin to secure in the restricted position.
- **8.** Test lock function by locking and unlocking with the key. Ensure the locking pin is securely locked into the lock body. The key must be used to unlock the lock. Ensure the opening distance does not exceed 10 cm (4 inches).
- g. To unlock the restrictor mechanism, insert the key and turn to release the locking pin.

#### Maintenance:

The manufacturer recommends maintenance is carried out on Remsafe products by a licensed tradesman every twelve (12) months. In addition, it is recommended that regular checks (every three to six months) are carried out by the user of each window safety device at the time of operation. Repeated force on a Remsafe Window Locks safety device may lead to general wear and tear and cause screws to become loose.

Consideration must be given to the local environment and maintenance carried out accordingly.

- 1. All screws must be checked to ensure they have not loosened. Loose screws must be tightened.
- **2.** All lock components must be checked for any signs of corrosion, cracking, or loss of function. Any locks showing signs of corrosion, cracking, or loss of function must be replaced immediately.
- 3. Manually pull on cable and lock body to ensure against excessive movement. Any lock showing excessive movement must be replaced immediately.
- **4.** If a window is able to be opened greater than 100 mm at any point a licensed tradesperson should be consulted for advice on the most appropriate window restrictor device for each window.

# Remsafe Metrolite World's first retractable cable lock



Warning: Window falls may result in injury or death. Falls from heights may still occur through windows with safety devices installed. To prevent falls from heights, climbable elements should be removed from below windows and children should be supervised around open windows. **NEVER LEAVE THE KEY UNATTENDED IN THE LOCK.** 

Remsafe Window Locks offer safety solutions for all window types.

Contact us for orders and enquiries on +61 2 9453 5625, email info@remsafewindowlocks.com.au

or visit www.remsafewindowlocks.com.au