
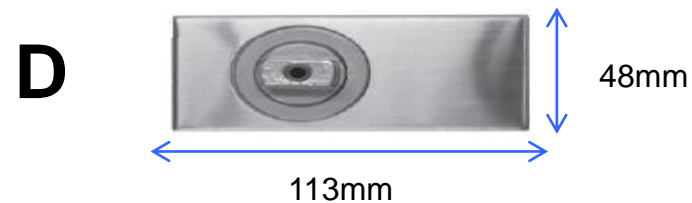
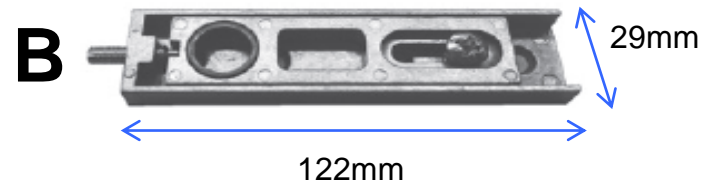


Signature HARDWARE

PIVOT INSTRUCTIONS

PRODUCT CODE: PKT-900

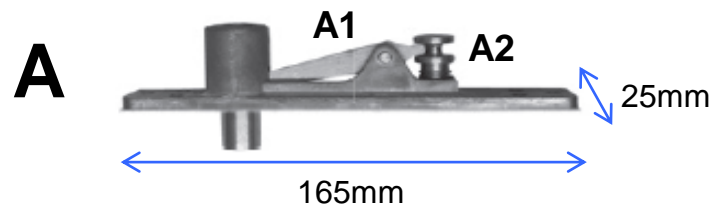

1. Depending on door type, use appropriate screws supplied.
2. Depending on length of throw for door type, position pivot beam (**A1**) in appropriate hole of pivot pin to suit. Pivot assembly to be housed into centre door jam head with centre of pivot pin 70mm from face of jam.
3. To adjust pivot pin up and down, turn adjusting screw to suit (**A2**).
4. Pivot bar (**B**) to be housed flush into top of door. Ensure slide piece is centred in housing before installation.
5. Bottom pivot bar (**C**) to be housed flush into bottom of door.
6. Bottom pivot plate (**D**) to be mounted onto face of threshold. Not recessed in. Drill 42mm diameter hole 12mm deep to accommodate pivot housing.
7. Top (**A**) and Bottom (**D**) pivot pins to be in alignment.

PIVOT RATED TO 300Kgs