Robert Watson Series Door Handles



The Robert Watson Collection of door furniture consists of three lever designs and a range of complementing escutcheons, turnknobs and emergency release sets. The roseless design of the furniture is unprecedented and the innovation and lateral thinking involved in the development of the products has led to them being patent protected and design registered.

Application

The Robert Watson range is suitable for commercial as well as residential use.

It can be fitted with:

- Lockwood Selector 3770 Series Mortice Locks
- Lockwood Synergy 3570 Series Mortice Locks
- Lockwood 6780 and 6580 Mortice Locks (38mm backset, metal doors only)
- Lockwood 531 Latches and 6260 **Tubular Bolts**

Fixing

Furniture is fixed to Selector 3770 or Synergy 3570 Series Mortice Locks using a specially developed pair of steel adaptor plates that are secured through the lock case using screws.

Robert Watson furniture may also be fitted with a Lockwood 531 Latch using a steel adaptor which locates over the body of the latch.

A special adaptor for fixing Robert Watson furniture to 6780 and 6580 Narrow Style Mortice Locks in hollow aluminium door sections is also available.

Product Details

Dimensions	Body: 36mm diameter. Projection from door: 62.5mm.
Materials	Furniture body: aluminium. Mounting stock and other internal components: stainless steel steel and brass

Selector 3770 and Synergy 3570 Series: 32mm to 50mm

Selector 6780 and Synergy 6580 Series:

Door Thickness 32mm to 50mm Lockwood 531 Latches: 35mm to 50mm

For Mortice Lock installation on doors

51mm to 62mm thick, use accessory pack RW00-42.

Satin Anodised (SA) **Finishes**

Powdercoat (PC)



Robert Watson Series has been successfully tested up to 4 hours with a fire rated Lockwood mortice lock on fire door assemblies (depending on type of doorset) in accordance with Australian Standard AS1905.1:2005, Fire Resistant Doorsets

Robert Watson Series lever sets have been successfully tested to conform with Level D8 (500,000 cycles) under Australian Standard AS4145.2-2008, Locksets and hardware for doors and windows

> Robert Watson Series in satin anodised finish has been successfully tested to conform with Level C10 (1000 hours) under Australian Standard AS4145.2-2008, Locksets and hardware for doors and windows

> Robert Watson Series is designed, assembled and customised in Australia to suit the requirements of the Australian Market










Robert Watson Levers

Tangent - Lever A1


Length	143 mm
Projection	62.5 mm
Finger Clearance	44.5 mm

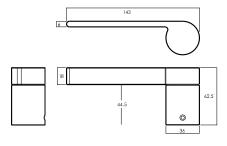



Centre - Lever A2


Length	143 mm
Projection	62.5 mm
Finger Clearance	44.5 mm

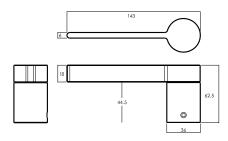



Centre D - Lever A3

Length	143 mm
Projection	62.5 mm
Finger Clearance	44.5 mm

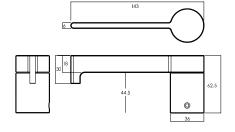




Robert Watson Series Escutcheons Output Description: Output De

These escutcheons are designed to be fitted with Lockwood oval cylinders and the Robert Watson range of turnknobs and emergency turns. Fitted using a grub screw, they ensure that the accessories they are fitted with are aesthetically pleasing.

Use with Lockwood Mortice Locks and 6260 Bolts. The escutcheons are available in different sizes for suitability to different door thicknesses.

Note: Escutcheons must be ordered separately for use with oval cylinders, turnknobs and emergency release turns.

Escutcheons		
Part Numbers	Door Thickness	(A) Dimension
RW06/38	35–38mm thick	17mm
RW06/44	39–44mm thick	14mm
RW06/50	45–50mm thick	11mm
RW06/56	51–56mm thick*	8mm
RW06/62	57 – 62mm thick*	5mm

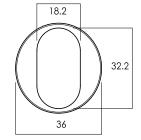







^{*}Extended door accessory pack required if levers are to be installed on doors of this thickness.

Turnknob

Part Number RW07

*Accessories—use with Selector 3770 and 6780 Series or Synergy 3570 and 6580 Series Mortice Locks.

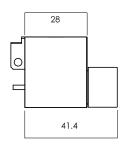







Privacy Indicating Turnknob

Part Number

RW08

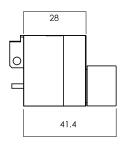







Turnknob and Emergency

Part Number

RW09


*Accessories—use with Selector 3770 and 6780 Series or Synergy 3570 and 6580 Series Mortice Locks.










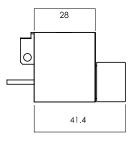







Turnknob and Privacy Indicating Emergency Release Set

Part Number

RW10


*Accessories—use with Selector 3770 and 6780 Series or Synergy 3570 and 6580 Series Mortice Locks.








Exterior

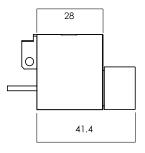

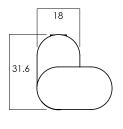





Privacy Indicating Turnknob and Privacy Indicating Emergency Release Set

Part Number


RW11


*Accessories—use with Selector 3770 and 6780 Series or Synergy 3570 and 6580 Series Mortice Locks







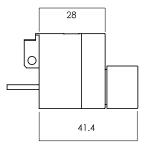

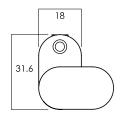




Interior


Turnknob and Emergency Release Set

Part Number

RW13


*Accessories–use with Lockwood 6260 Tubular Bolt.








Exterior

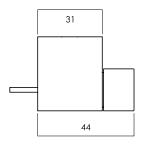

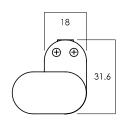




Interior


Privacy Indicating Emergency Release

Part Number

RW14

*Accessories–use with Selector 3770 and 6780 Series or Synergy 3570 and 6580 Series Mortice Locks.







Accessories–Latch Kits

Part Numbers	(Backset) Dimension
RW531/60SC	60mm
RW531/70SC	70mm
RW531/127SC	127mm

*Latch kits are supplied with adaptors required to fit Robert Watson Levers.



Standard turn adaptors supplied with Selector 3770 Series Mortice Locks can be used with Robert Watson turnknobs, no special adaptors needed. Simply remove the plastic insert of the turn adaptors during installation. Refer to the list below for Selector Series turn adaptors.

Selector 3770 Series Mortice Lock Turn Adaptors

Function	Adaptor
Locking Function	3772-ADAPTOR
Latching Function	3770-ADAPTOR



Special adaptors are required when using Robert Watson turnknobs with Synergy Series Mortice Locks. These can be ordered as spare parts. Refer to the list below.

runction	Adaptor	runction	Adaptoi
3570XTR	SP3570-6050	3572WTR	SP3572-6250
3570XTL	SP3570-6050	3572WTL	SP3572-6250
3570-TR	SP3570-6050	3572XAR	SP3572-6250
3570-TL	SP3570-6050	3572XAL	SP3572-6250
3571WTR	SP3571-6050	3573WTR	SP3571-6050
3571WTL	SP3571-6050	3573WTL	SP3571-6050
3571-TR	SP3571-6050	3573-TR	SP3571-6050

3573-TL

3574WTR

3574WTL

3574ETR

3574ETL

SP3571-6050

SP3572-6250

SP3572-6250

SP3572-6250

SP3572-6250

SP3571-6050

SP3572-6250

SP3572-6250

SP3572-6250

SP3572-6250

3571-TL

3572XTR

3572XTL

3572-TR

3572-TL

dn ƙew siңi sauji paysep solid lines this way up	IMPORTANT: drill from both sides of door to avoid chipping door face 60mm backset For cylinder or turn
3 7 7 3 3	2 Some short being the server of the server
	89mm backset O For levers drill 3mm diameter pilot hole for 25mm diameter hole (5mm deep for dummy sets) O For half dummy sets drill 3mm x 30mm deep hole to suit woodszerves. for full dummy sets drill 3mm pilot hole followed by 4mm through hole to replace you was pilot you pilot you pilot you
	127mm backset
	locate template vertically with lock coverplate recess

Installation Fixtures

Part Numbers	Description
RW98	Template for Lockwood 6780/6580 Series Mortice Locks (metal doors only)
RW99	Template for Lockwood 3770/3570 Series Mortice Locks

This stainless steel fixture makes installation easy. It is ideal when fitting furniture for large projects.


 $\textbf{Note:} \ \mathsf{Paper} \ \mathsf{templates} \ \mathsf{are} \ \mathsf{supplied} \ \mathsf{with} \ \mathsf{all} \ \mathsf{furniture}.$


Robert Watson Ordering Procedure

Ordering Procedure–Lever Sets

Sample part number RW70/01/A1LSA is made up of several sections. Choose your product by selecting an option from each section.

Robert Watson Collection

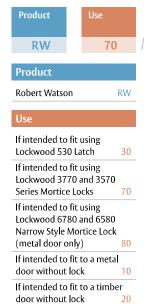



Note: Latch kits are ordered separately to lever sets. i.e. for RW30/00/A1LSA as RW531/60SC is also required.

These include additional mounting hardware to suit lever sets and are not the same as a standard 530 latch.


Handing	Finish
L	SA

Lever	
Tangent®	A1
Centre	A2
Centre D	A3

Handing	
Left Handed	L
Right Handed	R
* Half sets only.	

Finish	
Satin Anodised	SA
Powdercoat	PC

Escutcheons - Accessories

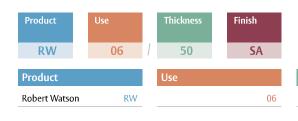


Function	
Doors 57mm – 62mm	62
Doors 51mm – 56mm	56
Doors 45mm – 50mm	50
Doors 39mm – 44mm	44
Doors 35mm – 38mm	38

Finish	
Satin Anodised	SA
Powdercoat	PC


Note: Refer to the decorative finishes section at the end of this catalogue for images of the full metal finishes and powder coat colour range available.

Robert Watson Ordering Procedure


Turnknobs and Emergency release turns - Accessories (For use with Lockwood Mortice Locks)

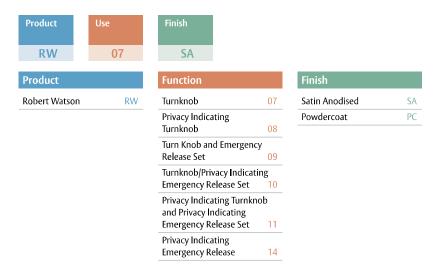

Turnknob and Emergency Release Turns - Accessories (For use with Lockwood 6260 Tubular Bolts)

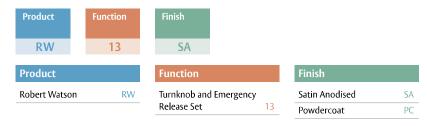

Latch Kits - Accessories

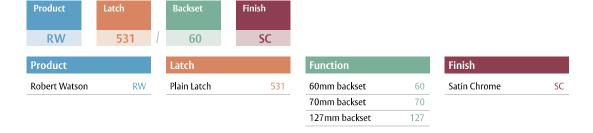

Latch Kits are supplied with adaptor to enable use with Robert Watson Furniture.

Note: Refer to the decorative finishes section at the end of this catalogue for images of the full metal finishes and powder coat colour range available.