

Metlam Australia Toilet Partition Hardware Kit Installation Instructions


Screw Fix Installation Instructions:

1. Before hanging the door, fix hinges to the frontal blade to the desired Handing (Right Hand or Left Hand).

Note: 3 Hinges per door recommended to ensure door bowing does not occur.

2. To hang the door: Stand door in doorway of cubicle, placing door on a jack. Adjust position and height using spacers.

3. Once the door has been hung:
 - a. Attach bumper.
 - b. Fit Lock
 - c. Fit Indicator
 - d. Fit the staple to the frontal ensuring a smooth fix when the indicator latch is rotated to the closed position
 - e. Install the coat hook/door stop ensuring none of the door hardware hits the division panel or wall

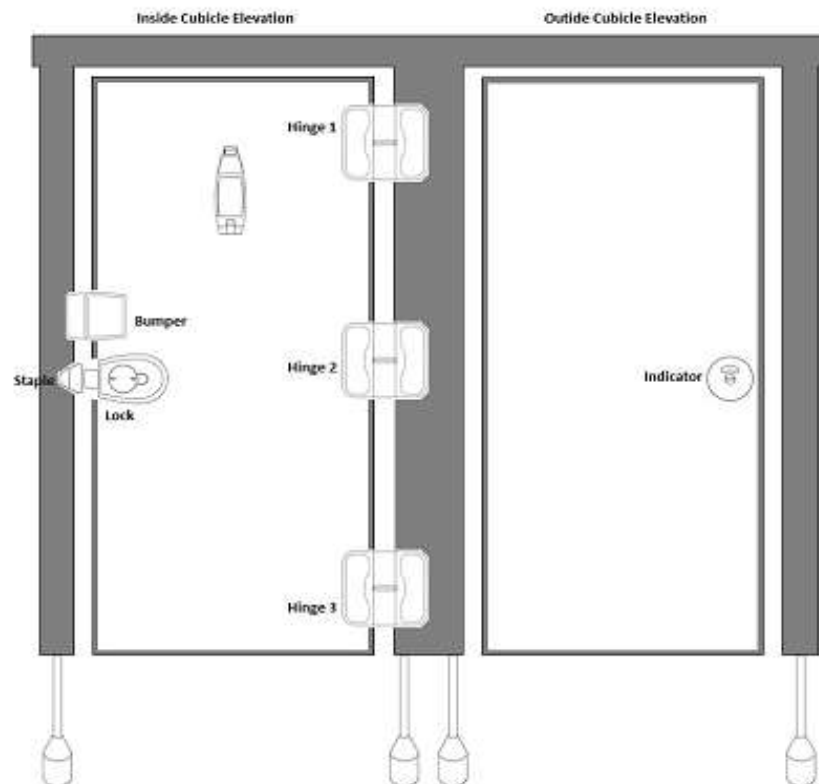

4. Where Spring Hinges are being used, please note that Metlam Australia's Moda Spring Hinge already comes tensioned for your convenience. For advanced tensioning settings, visit www.metlam.com.au to learn more about 'How to tension a Spring Hinge'.

Maintaining your Metlam Australia Toilet Partition Hardware:

For optimal performance, a regular cleaning regime is recommended using a dry cloth. Wipe down your Metlam Australia toilet partition hardware components to ensure no dirt or grime build up.

Never use chemical cleaners and abrasives, such as stainless wool to clean your toilet partition hardware as this may damage the finish and functioning of the product and void your warranty.

Preventative Hinge Maintenance:

Metlam Australia recommends a 12 monthly maintenance regime to ensure product longevity. Metlam Hinges come with Lift Off Capability so you can remove the door from the hinge with ease. After the door has been removed:

1. **Wipe down the hinge barrel with a clean cloth or paper towel to remove grime and dust build up.**
2. **Lightly spray the hinge pin with a Silicone spray remembering to wipe off any excess spray from the hinge and partition door.**
3. **Return door to cubicle frame by reinserting the hinge pin into the barrel.**