



MORE THAT JUST QUALITY — AN EXPERIENCE™



FUTURA STREAMLINE PASSAGE SET

Component: 1 Pair Lever Set &
1x 1131 Heavy Duty Latch



Description:


- 15 year warranty: all Futura Door Furniture for 15 years internally and 10 years externally against any defects in workmanship and materials. If within this time, it is found to be defective, Zanda will supply the same or an equivalent product free of charge.
- Ergonomic design for user comfort
- Modern European design
- Ideal for elderly
- Disabled compliant
- Backsets are 60mm. Specify if otherwise.
- Suit domestic and light commercial application
- Suits 25mm hole size

Available Set:

- Lever Set
- Passage Set
- Separate Privacy Set
- Integrated Privacy Set
- Dummy Set
- Entrance Set

Available Finish:

- Brushed Nickel
- Satin Chrome
- Graphite Nickel
- Matt Black
- Satin Brass
- White

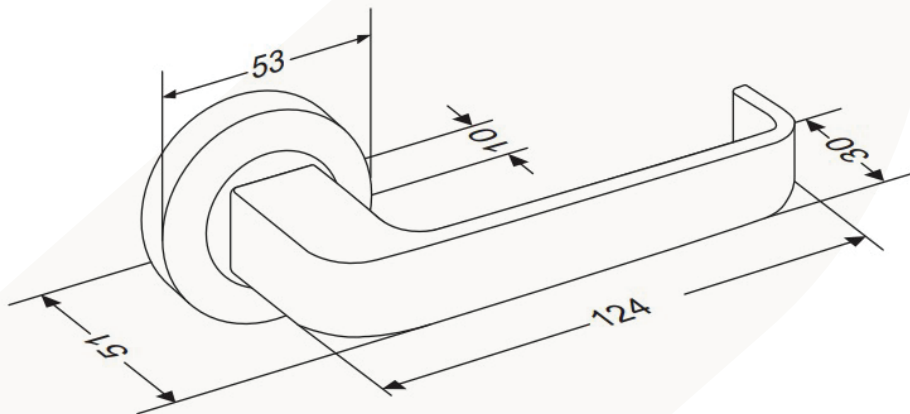

Note: Measurements are in mm






MORE THAT JUST QUALITY — AN EXPERIENCE™


FUTURA STREAMLINE PASSAGE SET

Component: 1 Pair Lever Set &
1x 1131 Heavy Duty Latch



- 1 Measure the thickness and mark the centre at the desired height for the latch.
- 2 Drill a 25mm(1") diameter hole through the door edge to a depth of atleast 90mm. Ensure this hole is square to the door.
- 3 Mark the face of the door each side for drilling a 48mm diameter spindle hole. The centre of the spindle hole will need to be 60mm from the door edge (backset). We recommend using a 48mm hole saw. For clean cutouts, drill from both side, meeting in the middle of the door.

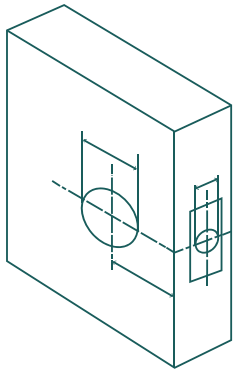


- 4 Insert the latch, scribe around the faceplate, remove, then chisel out the recess to enable the latch faceplate to sit flush the door edge.
- 5 Remove any loose saw dust, insert the latch and secure it with the wood screws provided.

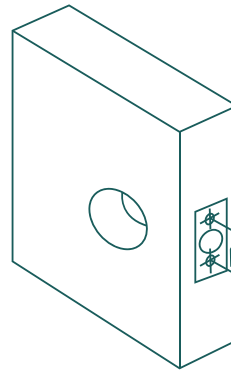

- 6 Insert handle 'A' in the 48mm hole with the spindle and rapidFIT attached and press against the door. Ensure the grooved side of the spindle is aligned with the grub-screws on the handle

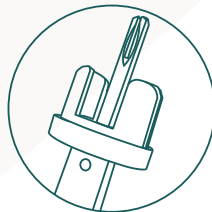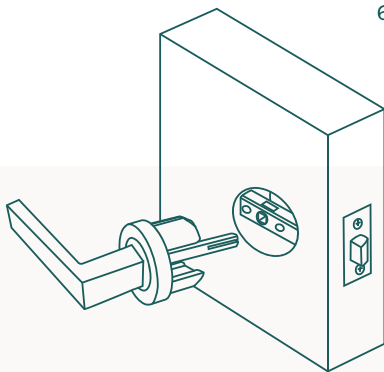



- 7 Insert handle 'B' over the spindle. Ensure the handles are straight before securing through the fixing screws.

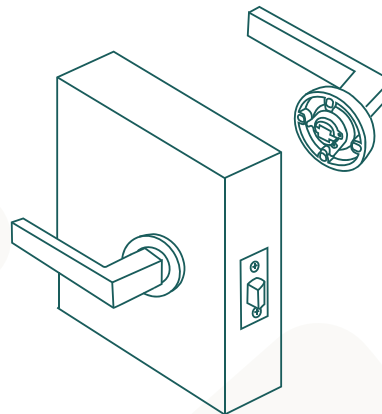

- 8 Screw the rose cover onto the handle and tighten the grub screws on the side of the levers onto the spindle for each side of the door.

Note: The grub screws may need a re-tighten after a bedding period. We recommend medium strength thread-lock to be used.

- 9 Close door against the frame and mark the latch position for fitting of the striker.
- 10 Router or chisel so the striker fits flush, allowing for the plastic dust-box behind the striker.
- 11 Secure the striker with the wood screws provided. Test the door and if necessary, adjust the striker and anti-rattle tab to take up any rattle.

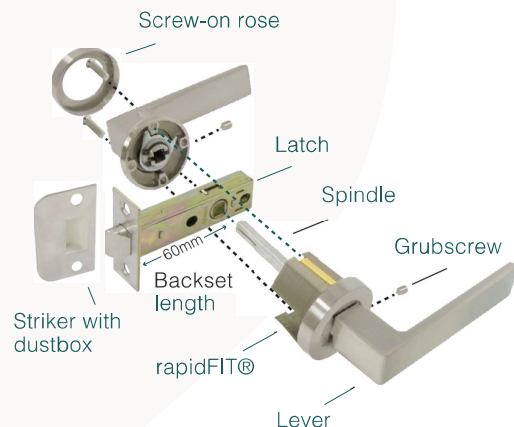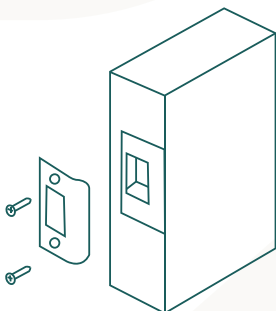

Note: Measurements are in mm



1 300 926 321

sales@zanda.com.au

www.zanda.com.au