


STEALTH SMART LONGPLATE

The Zanda Stealth Smart Lock lets you access and manage your door remotely with the Zanda App and Gateway. It has auto-lock or passage mode, four finish options, and suits wooden and aluminium doors.

Please read this manual carefully before installation. It is recommended to keep this manual for future reference. For any queries, do not hesitate to contact our team on the below details.

About the Lock

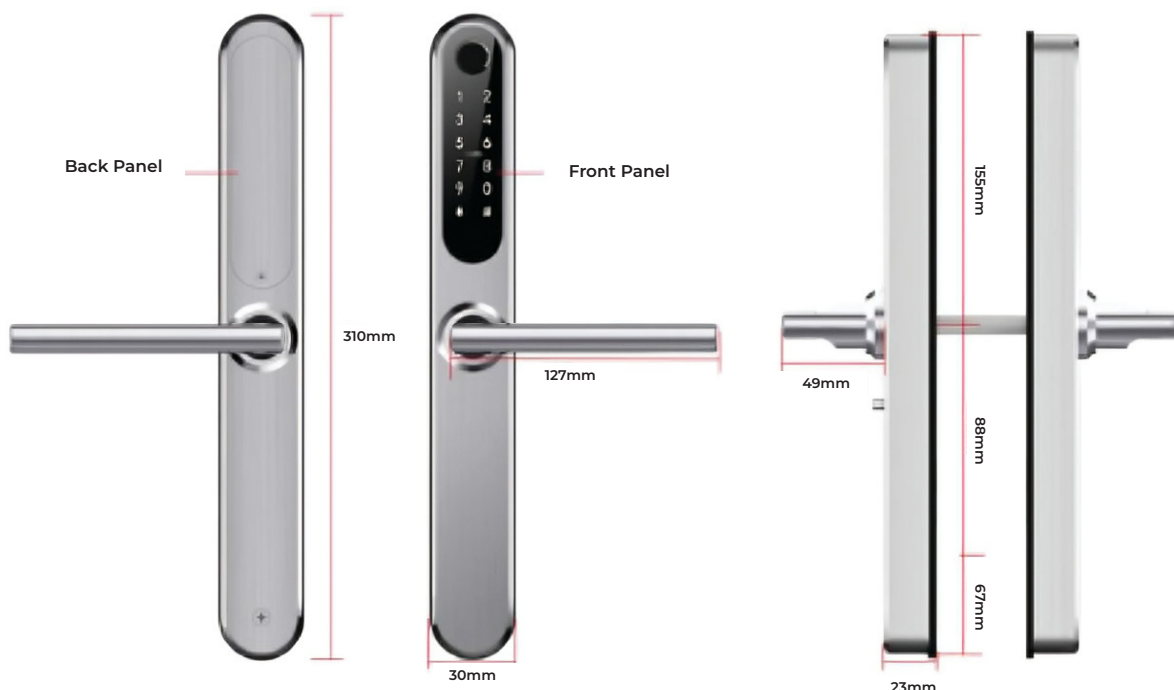

Packing List

The following table lists the items that should come with your smart lock.

No	Name	Qty
1	Front Panel	1
2	Back Panel	1
3	Mortice Lock	1
4	Card	3
5	Mechanical Key	2
6	Waterproof Rubber Plate	2
7	U-Clip	1
8	User Manual	1
9	Strike & Strike Box	1+1
10	Screw Stubs: M5*35mm	2

No	Name	Qty
11	Sliding Screws: M5*11mm	2
12	Mortice Screws: M*10mm (For Aluminum Door)	4
13	Mortice Screws: M4*20mm (For Wood Door)	5
14	M5*25 Screw	1
15	M5*30 Screw	1
16	M5*40 Screw	1
17	M5*50 Screw	1
18	M5*70 Screw	1
19	60mm Square Shaft	1
20	80mm Square Shaft	1

Specifications

Suitable for Models	1325	Suitable Door Types	Aluminum door Wooden door
Materials	Aluminum Alloy	Working Voltage	4x AA Batteries
Working Humidity	0-95%	Suitable Door Thickness	35-65mm
Unlocking Methods	Bluetooth Fingerprint(option) Password Card Mechanical key	Data Capacity	Fingerprint:200 Password:150 Card:200
Finishes Available:	Brushed Nickel, Graphite Nickel, Matt Black & Satin Brass	Working Temperature	-10°C-55°C

System Set Up

1. Open the cover plate on the front panel.
2. Press and hold the "Reset" button on the inside for three seconds.
3. Input "000#"
4. The setup is correct once the lock beeps twice




Reset Button


Installation

Notice: Adjust the handle according to the direction you open the door


Front Panel

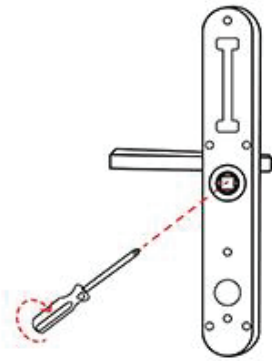

1. Turn the handle on the front panel
Loosen the inner hexagon screw of the handle counterclockwise

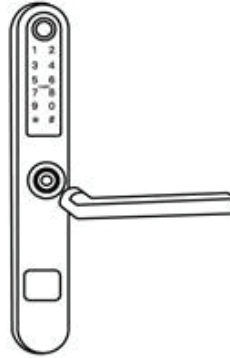


2. Remove the handle

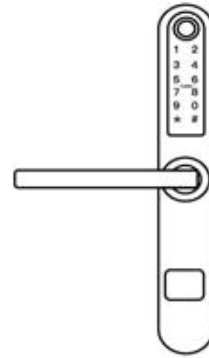

- 3 After adjusting the direction of the handle, insert it into the handle seat and re-lock the hexagon screw on the back of the handle.


Back Panel

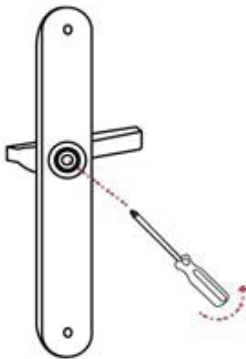

1. Turn the handle on the back panel
Loosen the inner hexagon screw of the handle counterclockwise









2. Remove the handle

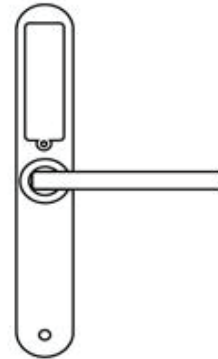

- 3 After adjusting the direction of the handle, insert it into the handle seat and re-lock the hexagon screw on the back of the handle.

Installation Diagram (For Mortice)

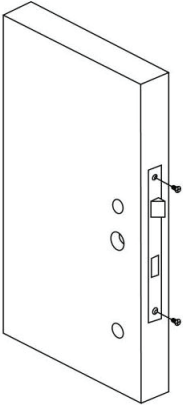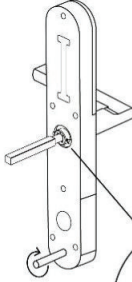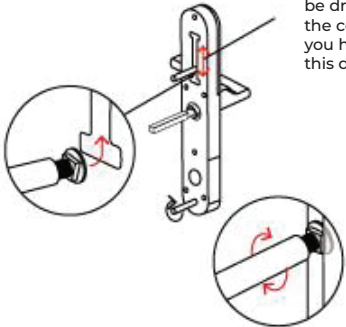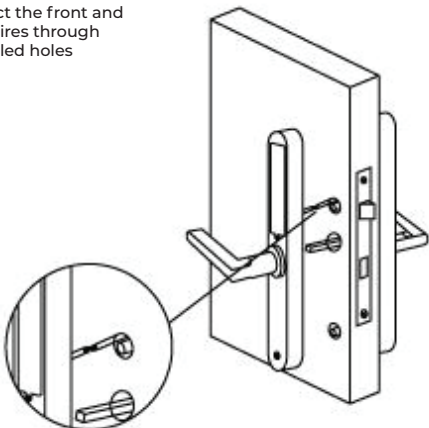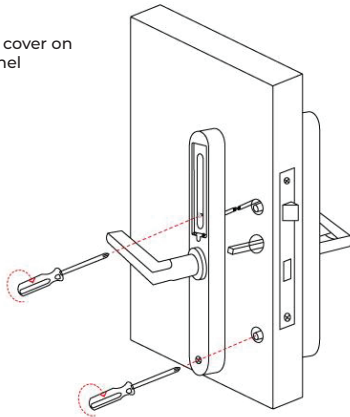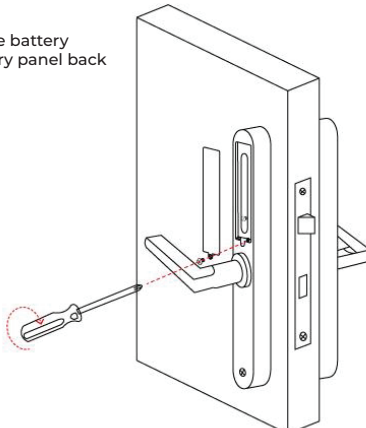Install Mortice	Install Square Spindle
	 <p>If the handle points to left, turn the triangle point to left</p> <p>If the handle points to right, turn the triangle point to right</p> <p>Insert the wire into the hole and bend it's front end to fix the square shaft</p>
Drill hole for the wires	Connect the wires
 <p>Drill the hole for the wires to go through the lock. The holes can be drilled 65mm - 110mm from the centre of the spindle shaft. If you have an existing hole within this distance, use that hole.</p>	 <p>Connect the front and back wires through the drilled holes</p>
Fix Back Panel	Insert Batteries
 <p>Remove cover on back panel</p> <p>Fix through top and bottom fixing points</p>	 <p>Insert the battery Fix battery panel back on.</p>

Operation

Registration



The iOS version of software can be downloaded from the app store, and the Android version can be downloaded from the Google play and other app stores.

Connect lock to the phone

1. Scan the QR code to download the app. You can also search for the TTLock in an app store(Google Play) and download from here
2. Login with an existing account, follow the prompts to create a new account. You will need to enter your phone number and email.
3. Touch the lock screen to make it light up, and then click "Add Lock".
4. The smart lock will appear on your phone screen - click the "+" sign.
5. Re-name the lock.
6. The lock has now added successfully.


The image shows two screenshots of the TTLock app. The left screenshot is the 'Register' screen, which has tabs for 'Phone' and 'Email'. It includes fields for 'Country/Region' (set to American Samoa+1684), 'Enter your Phone number', 'Password between 6-20 chars', 'Confirm Password', and 'Verification Code' with a 'Get Code' button. A 'Register' button is at the bottom. The right screenshot is the 'Login' screen, featuring a hand icon, a phone number field (18520265893), a password field, and a 'Login' button. A 'Forgot Password?' link is below the login button.

TTlock users can create an account using phone and email. It currently support 200 countries and regions around the world. The verification code will be sent to the user's mobile phone or email, to verify the account. Registration will be successful after the verification.

TTLock supports multiple types of lock devices. Each lock needs to be added using the app. The default password is 123456 for all new Zanda Stealth Locks.

To add a new lock, open TTLock app. Open the menu on the left hand side of the screen and select '+add Lock'. Alternatively, use the button shown in Figure 1 below. Click 'All Locks', and the app will search for nearby locks. Once your lock has appeared, select it and then rename it as shown in Figure 4. You will need to have your bluetooth turned on for the app to connect with the smart lock

Figure 1

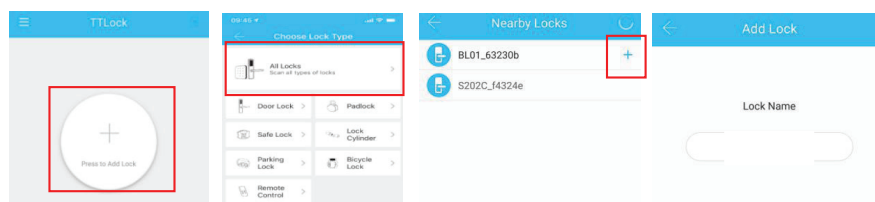


Bluetooth Management

To make sure the Bluetooth communication is working, connect your phone to the smart lock, using the step above. Stand within 5 meters of the smart lock and press the '🔑' key. If your phone is connected properly, the smart lock will lock.




Setting the Passwords


You can also unlock the Smart Lock using passwords. After entering the password, press the unlock button in the lower right-hand corner of the keypad. Passwords can either be permanent, time-limited, one-time, recurring or custom. You can share the passwords via different mediums such as SMS and email.

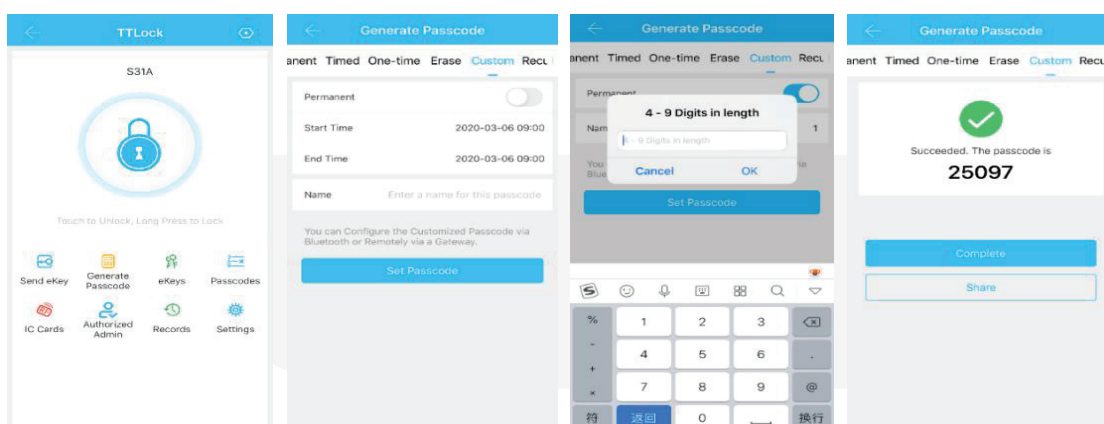

Send e-Key


Click on the '🔑'  as shown in the figure below. This allows you to send an e-key to other users who have the TTLock app. You can authorize another user to unlock your smart lock, using this e-key. It is important to note that only people who have an account set up with TTlock can receive and use the e-keys.

Select the e-key format that you prefer. Enter the recipient's TTlock account, name the e-key, and set the time that it will be effective for. You can give the recipient the ability to unlock the smart lock remotely, and set them up as an authorized admin. Once sent, the recipient's account has permission and access to the lock for the time the e-key is effective.

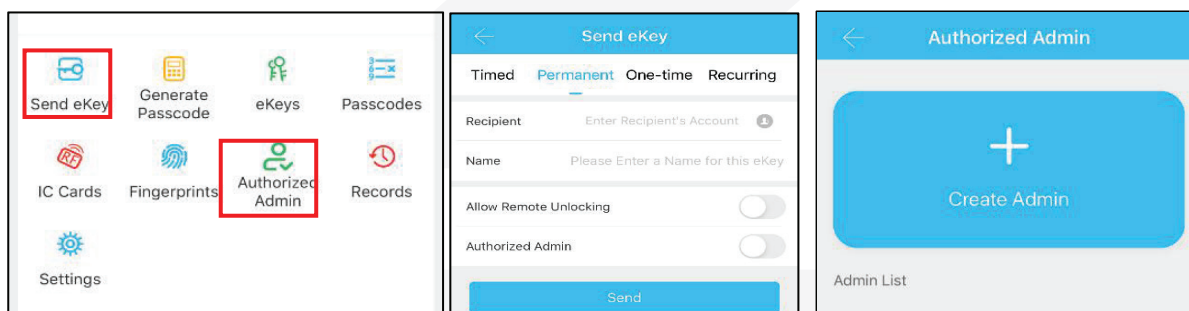


Add a card

The lock can be opened by various IC cards. Before an IC card is used to open the door, it needs to be set up in the app. To add the card, click the IC Cards button, and the "Add Card" Input the start and end times, and name of the card.

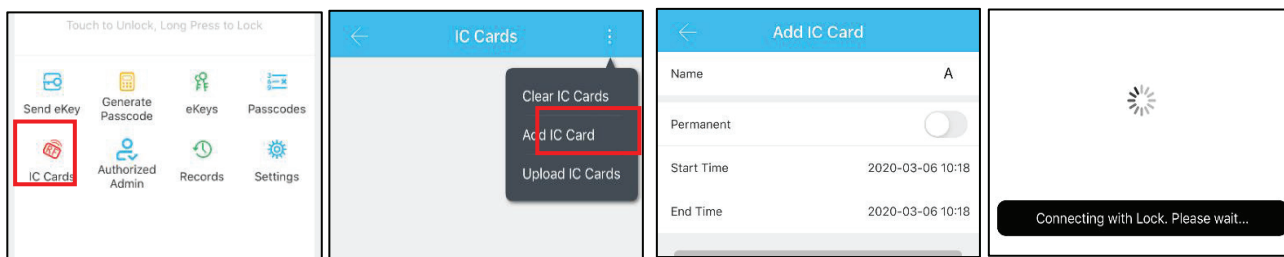

Add fingerprint

Fingerprints can be added to the locks as well. Using the 'Fingerprints' button and the three dots in the right hand corner, add as many fingerprints to the lock as you need. Each fingerprint can be assigned a start and end time, and it is recommended you name the fingerprints so they are easy to remove if necessary.

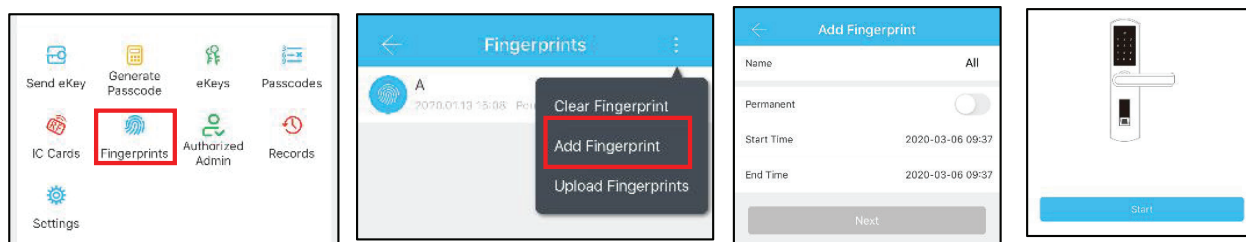


e-Key Management

Using the 'eKeys' button, the app admin can delete e-keys, reset e-keys, and adjust sent e-keys as necessary. The admin also has the ability to look up the record of each e-key and see when it has been used to open or close the lock.

All generated passwords can be viewed and managed in the password management section. This includes a password change, passwords being deleted or reset and the record of when a password has been used to unlock the lock.

Unlock Records


Click 'Records' to view the whole entry/exit history of your smart lock.

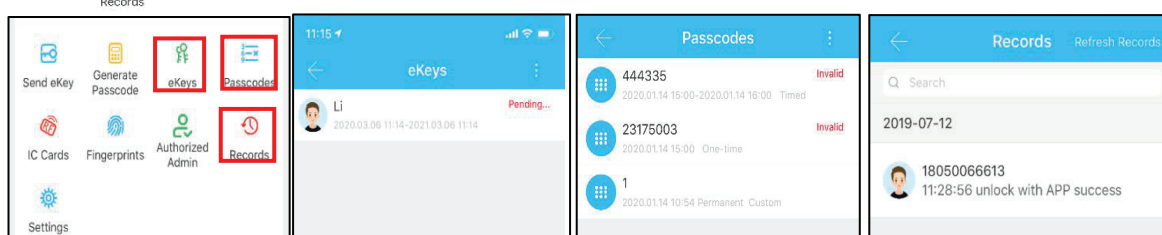









Gateway Management (Optional)

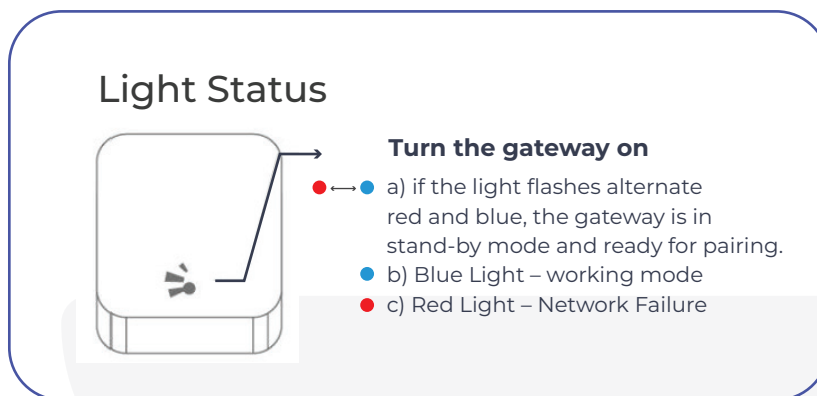The TTLock can be set up using a gateway. This allows the lock to connect to your wifi, and therefore enables you access to the lock from anywhere where you have wifi available. It also means you can check the lock records and change the passwords from a remote location.

Adding the Gateway

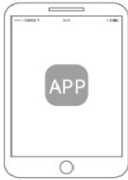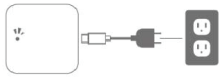

Pair the Gateway with APP
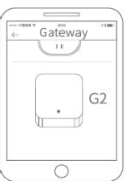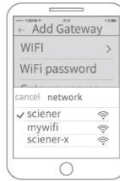
<p>1</p> <p><i>Activate the app</i></p>		<p>5</p> <p><i>Plug in the gateway and turn it on, so that the red and blue lights flash.</i></p>	
<p>2</p> <p><i>Press the three horizontal lines in the top left hand corner of the app</i></p>		<p>6</p> <p><i>Press the + sign on the app.</i></p>	
<p>3</p> <p><i>Select 'Gateway'</i></p>		<p>7</p> <p><i>Add the gateway, including the gateway name.</i></p>	
<p>4</p> <p><i>Select 'G2'</i></p>		<p>8</p> <p><i>Select the network and fill in the network details and Click Complete</i></p>	

FAQS

1) What is the purpose of the Auto Lock function?	The Auto Lock function enables you to set the time between when the smart lock is unlocked and when it automatically locks again.
2) I have installed the lock, and now the keypad and screen are not responding.	a) First check that the batteries have been installed in the correct position. b) Remove the back panel and check that the wire between the panels is correctly connected.
3) I am unable to register my fingerprint	Check that your fingers are clean and there is no dirt or oil on them – this will hinder the lock’s ability to sense and record your fingerprint. Also check the sensor the lock is clean. Check that the fingerprint sensor is working at all by pressing on it. Even if the fingerprint isn’t recognized, it should still respond with a beep.
4) Is it usual for the smart lock to consume power fast?	Yes, it is normal – the locks have a short circuit, and large standby power consumption.
5) There is no response when I press the handle on the outside of the door.	This could be an issue with the installation of the shaft into the panel – check that the triangle on the shaft is pointing in the correct direction.
6) What will the lock do if I enter the incorrect password too many times?	If you enter the wrong password more than five times in a row, the keyboard will be locked for 5 minutes. The door can still be unlocked using other methods, such as a swipe card.

GUARANTEE

Customer Name: _____

Customer Calls: _____

Purchase Date: _____

Product Name: _____

Product Model: _____

Note:

1. Please keep this card so that you can use it when you need warranty service.
2. We provide you with a one-year warranty from the date of purchase.
3. This warranty service is valid for customers in any country